

# Scheduled Maintenance

## Scheduled Maintenance

Vehicles utilizing the vehicle status monitor feature:

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on.

The display/wrench indication will come on before reaching the maximum interval of 16,000 km (10,000 miles), or 12 months (after the previous maintenance).

If you drive your vehicle under any of the following conditions, follow the Severe Driving Scheduled Maintenance and replace the engine oil and filter every 8,000 km (5,000 miles) or 6 months, whichever comes first.

Otherwise, follow the Normal Driving Scheduled Maintenance intervals.

1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
2. The vehicle is driven mainly unpaved road.
3. The vehicle is driven mainly on mountain roads or uphill roads.

If you are following the Severe Driving Scheduled Maintenance (8,000 km (5,000 miles) or 6 months oil replacement interval), set the vehicle status monitor manually.

Refer to the Information section in the Mazda Connect Owner's Manual. Please contact an Authorized Mazda Dealer if necessary.

### USA and Canada Residents (Normal Driving Scheduled Maintenance):

Maintenance Item		Number of times, maintenance was performed.							
		1	2	3	4	5	6	7	8
Engine oil & filter* <sup>1</sup>		R	R	R	R	R	R	R	R
Spark plugs		Replace every 120,000 km (75,000 miles).							
Air filter				R			R		
Fuel lines & hoses* <sup>2</sup>			I		I		I		I
Hoses and tubes for emission* <sup>2</sup>					I				I
Drive belts		I	I	I	I	I	I	I	I
Exhaust system and heat shields					I				I
Coolant level		I	I	I	I	I	I	I	I
Coolant* <sup>3</sup>	Engine	Replace at first 192,000 km (120,000 miles) or 120 months; after that, every 96,000 km (60,000 miles) or 60 months.							
	EV system	Replace at first 192,000 km (120,000 miles) or 180 months; after that, every 96,000 km (60,000 miles) or 60 months.							
Brake lines, hoses and connections			I		I		I		I
Brake and clutch fluid level		I	I	I	I	I	I	I	I
Brake fluid			R		R		R		R