

## Scheduled Maintenance (North America)

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

<b>NOTE</b>
After the described period, continue to follow the described maintenance at the recommended intervals.

Maintenance and Care

▼ Schedule 1

**I** : Inspect and repair, clean, adjust, or replace if necessary.  
(Oil-permeated air filter cannot be cleaned using the air-blow method.)  
**R** : Replace  
**L** : Lubricate

Maintenance Interval Maintenance Item	Number of months or kilometers (miles), whichever comes first								
		6	12	18	24	30	36	42	48
	×1000 Km	12	24	36	48	60	72	84	96
(×1000 Miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)	
Engine valve clearance									I
Engine timing belt	Replace every 96,000km (60,000miles)								
Drive belt (tension)					I				I
Engine oil	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R
Cooling system					I				I
Engine coolant	Replace at first 72,000km (45,000miles) or 36 months ; after that, every 48,000km (30,000miles) or 24 months								
Idle speed					I				I
Air filter					R				R
Fuel lines and hoses*					I				I
Hoses and tubes for emission*									I
Spark plugs					R				R
Brake lines, hoses and connections					I				I
Disc brakes					I				I
Steering operation and linkages					I				I
Manual transmission oil									R
Rear differential oil									R
Front suspension ball joints					I				I
Driveshaft dust boots					I				I
Bolts and nuts on chassis and body					I				I
Exhaust system heat shields					I				I
All locks and hinges	L	L	L	L	L	L	L	L	L
Refrigerant amount (if installed)		I			I		I		I
Compressor operation (if installed)		I			I		I		I

\*: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

▼ Schedule 2

**I** : Inspect: Inspect and repair, clean, adjust, or replace if necessary.  
(Oil-permeated air filter cannot be cleaned using the air-blow method.)  
**R** : Replace  
**L** : Lubricate

Maintenance Interval	Number of months or kilometers (miles), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 Km	8	16	24	32	40	48	56	64	72	80	88	96
Maintenance Item	(×1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Engine valve clearance													I
Engine timing belt	Replace every 96,000km (60,000miles)												
Drive belts (tension)							I						I
Engine oil	Puerto Rico	Replace every 5,000km (3,000miles) or 3 months											
	others	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R
Cooling system							I						I
Engine coolant	Replace at first 72,000km (45,000miles) or 36 months ; after that, every 48,000km (30,000miles) or 24 months												
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I
Idle speed							I						I
Air filter				I*			R			I*			R
Fuel lines and hoses*							I						I
Hoses and tubes for emission*													I
Spark plugs							R						R
Function of all lights		I	I	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections							I						I
Brake and clutch fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes				I			I			I			I
Tire inflation pressure and tire wear		I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages							I						I
Power steering fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Manual transmission oil							R						R
Rear differential oil							R						R
Front suspension ball joints							I						I
Driveshaft dust boots							I						I
Bolts and nuts on chassis and body				I			I			I			I
Exhaust system heat shields							I						I
All locks and hinges		L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level		I	I	I	I	I	I	I	I	I	I	I	I

\*: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

Mazda MX-5 Miata - Maintenance Schedule

**Maintenance and Care**

---

**I** : Inspect: Inspect and repair, clean, adjust, or replace if necessary.  
(Oil-permeated air filter cannot be cleaned using the air-blow method.)  
**R** : Replace  
**T** : Tighten  
**L** : Lubricate

Maintenance Interval	Number of months or kilometers (miles), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 Km	8	16	24	32	40	48	56	64	72	80	88	96
Maintenance Item	(×1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Refrigerant amount (if installed)				I			I			I			I
Compressor operation (if installed)				I			I			I			I