

Scheduled Maintenance

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates
- Towing a trailer

NOTE
After the prescribed period, continue to follow the described maintenance at the recommended intervals.

Maintenance and Care

▼ Schedule 1

I : Inspect and repair, clean, adjust, or replace if necessary.
R: Replace
L: Lubricate
C: Clean

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	6	12	18	24	30	36	42	48
	×1000 km	12	24	36	48	60	72	84	96
	×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60

ENGINE

Engine oil	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R
Drive belts				I					I
PCV valve*1									I

IGNITION SYSTEM

Spark plugs (Platinum tipped type)	Replace every 160,000 km (100,000 miles)								
------------------------------------	---	--	--	--	--	--	--	--	--

FUEL SYSTEM

Air filter			C		R				C
Fuel lines and hoses*1				I					I

COOLING SYSTEM

Cooling system				I					I
Engine coolant	Replace at first 72,000 km (45,000 miles) or 36 months ; after that, every 48,000 km (30,000 miles) or 24 months								

CHASSIS and BODY

Brake lines, hoses and connections				I					I
Brake fluid				R					R
Disc brakes				I					I
Drum brakes				I					I
Steering operation and linkages				I					I
Front suspension ball joints				I					I
Driveshaft dust boots				I					I
Bolts and nuts on chassis and body				I					I
Exhaust system heat shields				I					I
All locks and hinges	L	L	L	L	L	L	L	L	L

AIR CONDITIONER SYSTEM (if equipped)

Refrigerant amount		I		I		I			I
Compressor operation		I		I		I			I
Cabin air filter (if equipped)	Replace once a year or every 20,000 km (12,000 miles)								

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

▼ Schedule 2

I : Inspect and repair, clean, adjust, or replace if necessary.
 R: Replace L : Lubricate C : Clean

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 km	8	16	24	32	40	48	56	64	72	80	88	96
	×1000 miles	5	10	15	20	25	30	35	40	45	50	55	60

ENGINE

	Puerto Rico	Replace every 5,000 km (3,000 miles) or 3 months												
Engine oil	Others	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts							I						I	
PCV valve*1													I	
Hoses and tubes for emission(Puerto Rico)													I	

IGNITION SYSTEM

	USA	Replace every 96,000 km (60,000 miles)											
Spark plugs (Platinum tipped type)	Others*2	Replace every 160,000 km (100,000 miles)											

FUEL SYSTEM

	Puerto Rico	C R C R C R C R C R C R												
Air filter	Others				C									
Fuel lines and hoses*1								I						I

COOLING SYSTEM

Cooling system														
Engine coolant		Replace at first 72,000 km (45,000 miles) or 36 months ; after that, every 48,000 km (30,000 miles) or 24 months												
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I	I

ELECTRICAL SYSTEM

Function of all lights		I	I	I	I	I	I	I	I	I	I	I	I	I
------------------------	--	---	---	---	---	---	---	---	---	---	---	---	---	---

CHASSIS and BODY

Brake lines, hoses and connections								I						I
Brake fluid								R						R
Brake fluid level		I	I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes				I				I			I			I
Drum brakes								I						I
Tire inflation pressure and tire wear		I	I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages								I						I
Power steering fluid level		I	I	I	I	I	I	I	I	I	I	I	I	I
Front suspension ball joints								I						I
Driveshaft dust boots								I						I
Bolts and nuts on chassis and body				I				I			I			I
Exhaust system heat shields								I						I
All locks and hinges		L	L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level		I	I	I	I	I	I	I	I	I	I	I	I	I

AIR CONDITIONER SYSTEM (if equipped)

Refrigerant amount					I			I			I			I
Compressor operation					I			I			I			I
Cabin air filter (if equipped)		Replace once a year or every 20,000 km (12,000 miles)												

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

*2 If the vehicle is operated under any of the following conditions, change the spark plugs every 96,000 km(60,000 miles) or shorter.
 a)Repeated short-distance driving
 b)Extended periods of idling or low-speed operation
 c)Driving for long periods in cold temperatures or extremely humid climates
 d)Towing a trailer